


Assembly Steps



1. Screw 12 wheels into pilot holes



2. Turn unit over and place on flat

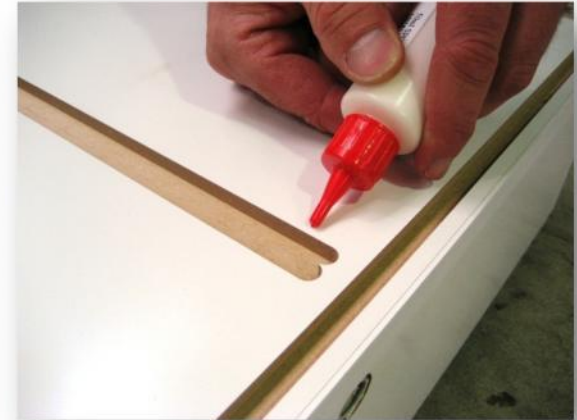


3. Glue along each side of central



4. Using two people to lift central panel and place panel into groove




5. Use soft hammer make sure central panel is flush to groove

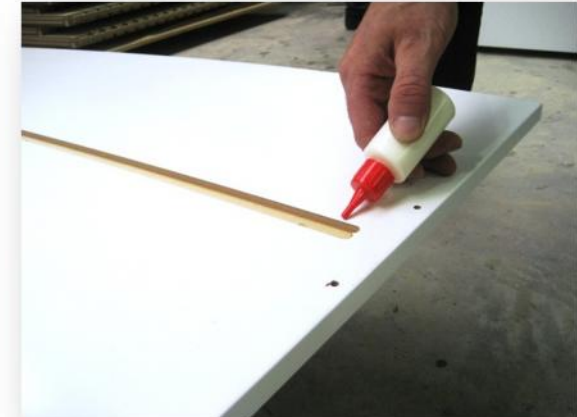

6. Glue along each side of groove on end of unit

Assembly Steps

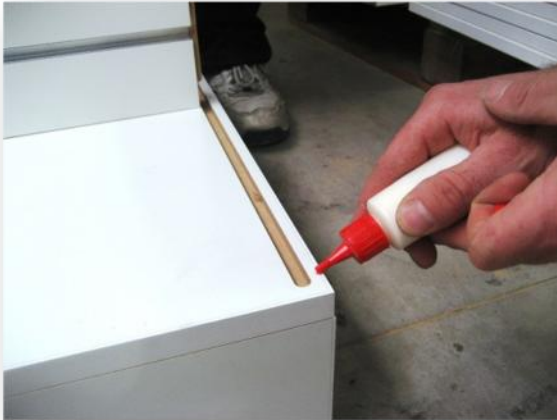

7. Also glue ends of base



8. While one person holds central panel steady the other person places end panel



9. using soft hammer gently knock end panel into place until flush with



10. Using drill, insert screw into end




11. Repeat with other end panel



12. Screw pin into four holes

Assembly Steps

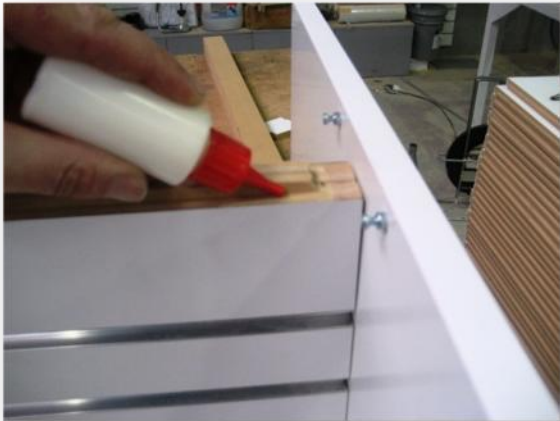

13. Glue along each top side of central panel



14. Using Philip head screw driver tighten cams



15. Ensure top is levelled



16. Check end panels are flush to sides of base